




Heavy & Medium Duty/ISUZU (North America)/N Series/6.0 Gasoline//--/[2005]
Isuzu/-/-/-/-

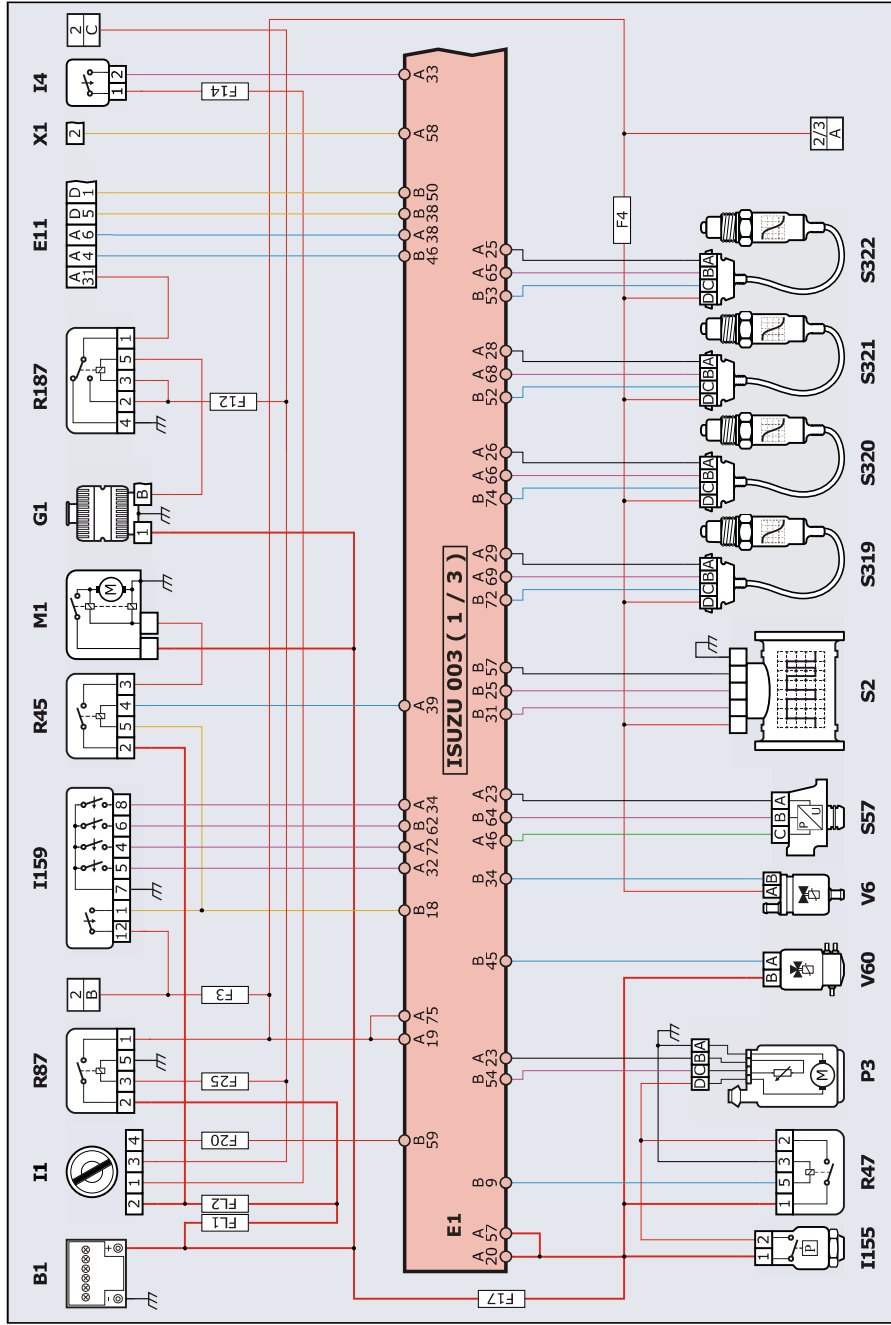

Heavy & Medium Duty/ISUZU (North America)/N Series/6.0 Gasoline//--/[2005]
Isuzu//--/--/

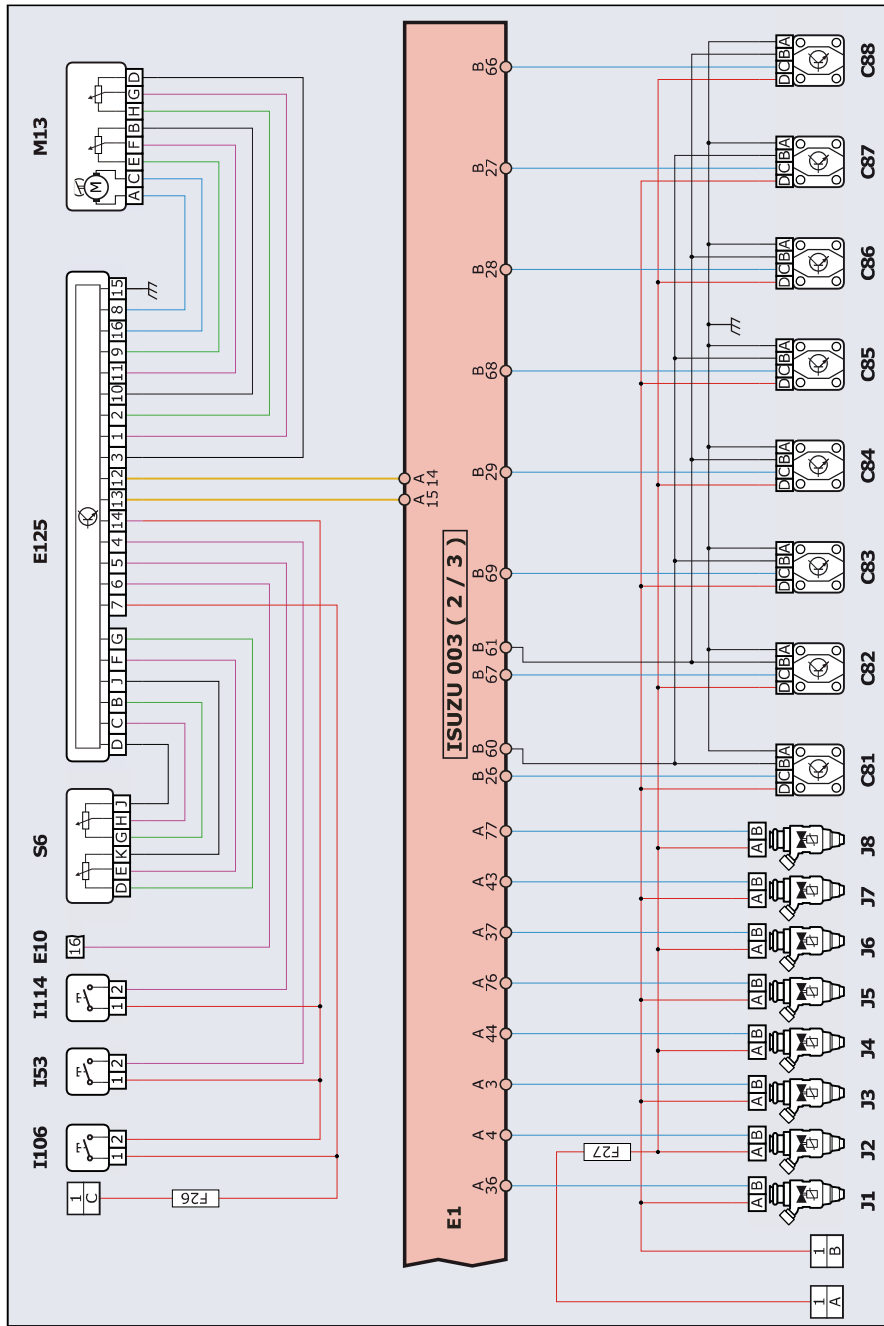

Heavy & Medium Duty/ISUZU (North America)/N Series/6.0 Gasoline/---/[2005]
Isuzu/---/---/---

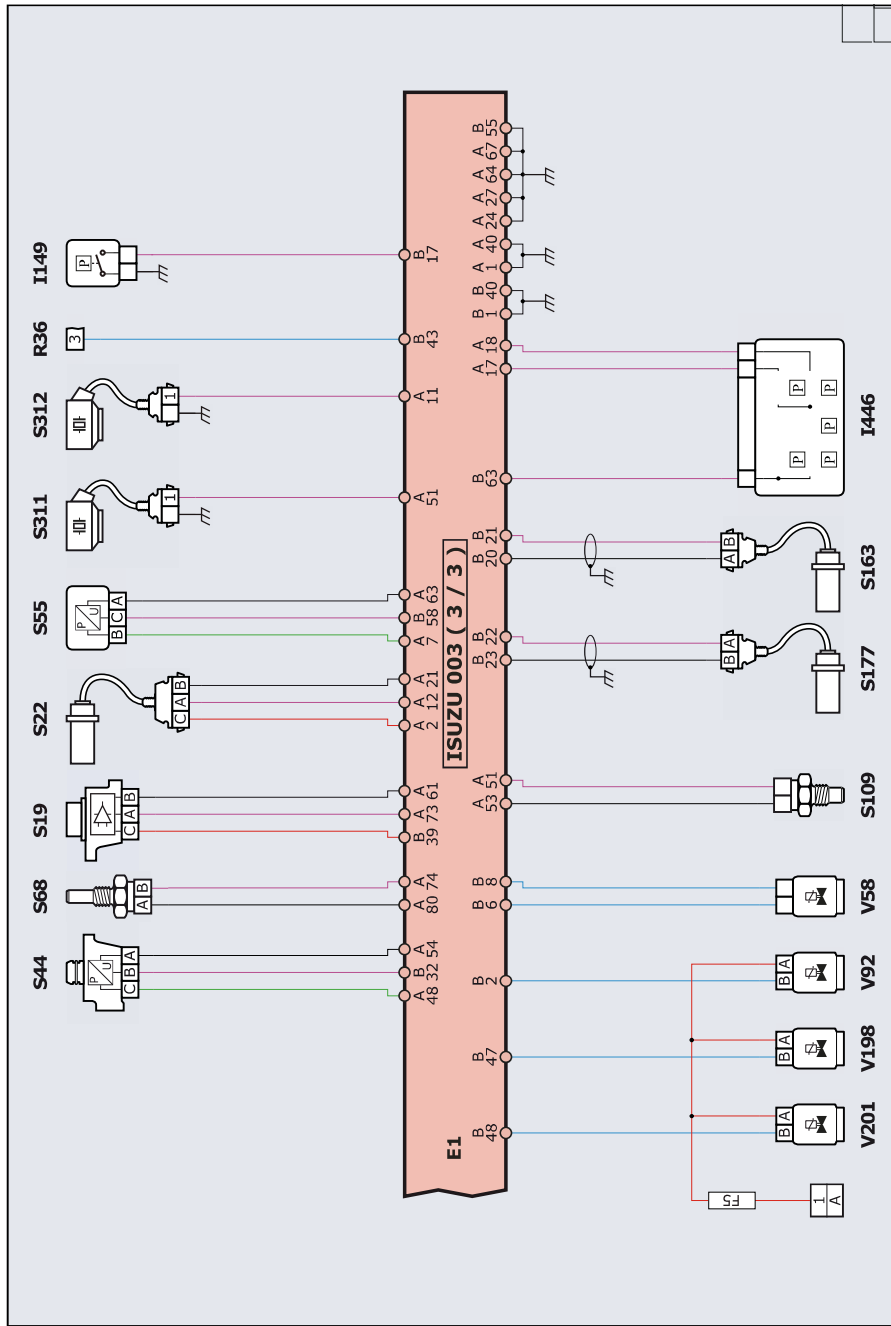


**Heavy & Medium Duty/ISUZU (North America)/N Series/6.0 Gasoline/--/[2005]
Isuzu/--/--**

Component list

B1	Starting battery
C81	Cylinder 1 transistorized coil-near-plug
C82	Cylinder 2 transistorized coil-near-plug
C83	Cylinder 3 transistorized coil-near-plug
C84	Cylinder 4 transistorized coil-near-plug
C85	Cylinder 5 transistorized coil-near-plug
C86	Cylinder 6 transistorized coil-near-plug
C87	Cylinder 7 transistorized coil-near-plug
C88	Cylinder 8 transistorized coil-near-plug
E1	Engine management control unit
E10	ABS control unit
E11	Instrument panel control unit
E125	Intake manifold throttle control module
F12	10 A fuse
F14	10 A fuse
F17	30 A fuse
F20	10 A fuse
F25	10 A fuse
F26	15 A fuse
F27	15 A fuse
F3	15 A fuse
F4	20 A fuse
F5	5 A fuse
FL1	100 A fuse
FL2	50 A fuse
G1	Alternator
I1	Ignition Switch
I106	Cruise control switch
I114	Speed recovery switch
I149	A/C pressure switch
I155	Oil pressure switch
I159	Gear shift lever
I4	Brake light switch
I446	Multi-plate clutches and brakes oil pressure switch assembly
I53	Speed setting switch
J1	Cylinder 1 magnetic injector
J2	Cylinder 2 magnetic injector
J3	Cylinder 3 magnetic injector
J4	Cylinder 4 magnetic injector
J5	Cylinder 5 magnetic injector
J6	Cylinder 6 magnetic injector
J7	Cylinder 7 magnetic injector
J8	Cylinder 8 magnetic injector

M1	Starter motor
M13	Intake manifold throttle control motor with dual potentiometer
P3	Fuel pump with level sensor
R187	Alternator warning light relay
R36	Compressor clutch engagement relay
R45	Starter motor relay
R47	Fuel pump relay
R87	Main relay
S109	Transmission fluid temp. sensor
S163	Transmission output shaft speed (rpm) sensor
S177	Transmission input shaft speed sensor
S19	Hall timing sensor
S2	Digital air mass meter
S22	Hall effect speed sensor
S311	Knock sensor, bank 1
S312	Knock sensor, bank 2
S319	Heated oxygen sensor upstream of the catalyst - bank 1
S320	Heated oxygen sensor upstream of the catalyst - bank 2
S321	Heated oxygen sensor downstream the catalyst, bank 1
S322	Heated oxygen sensor downstream the catalyst, bank 2
S44	Intake air pressure sensor
S55	Oil pressure sensor
S57	Evaporative emissions pressure sensor
S6	Accelerator dual potentiometer
S68	Coolant temperature sensor
V198	Gear selection solenoid valve 2 3
V201	Gears 1 2 selection solenoid valve
V58	Transmission fluid circuit solenoid valve
V6	Evaporative emission purge solenoid valve
V60	Canister bypass solenoid valve (EVAP)
V92	Torque converter clutch actuator solenoid valve
X1	Diagnostic socket

**Heavy & Medium Duty/ISUZU (North America)/N Series/6.0 Gasoline/--/[2005]
Isuzu/--/--**

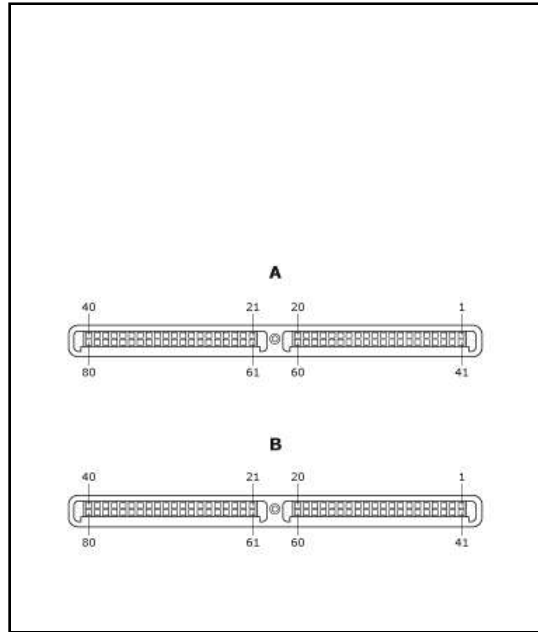

Wiring side connector pinout

A = 80

B = 80